




1217 E. 7<sup>th</sup> Street  
Mishawaka, IN 46544  
Phone: 1-800-334-4712  
1-888-339-2539  
Fax: 574-256-6743

# T.I.P. Troubleshooting Information on Power Gear

## SLIDE-OUT ROOM HEIGHT ADJUSTMENT

For proper slide-out operation the slide-out room floor to slide-out rail height must be set. This procedure is to be performed at the factory during room installation and should be checked periodically.

To set the room height, please refer to the Figure below.

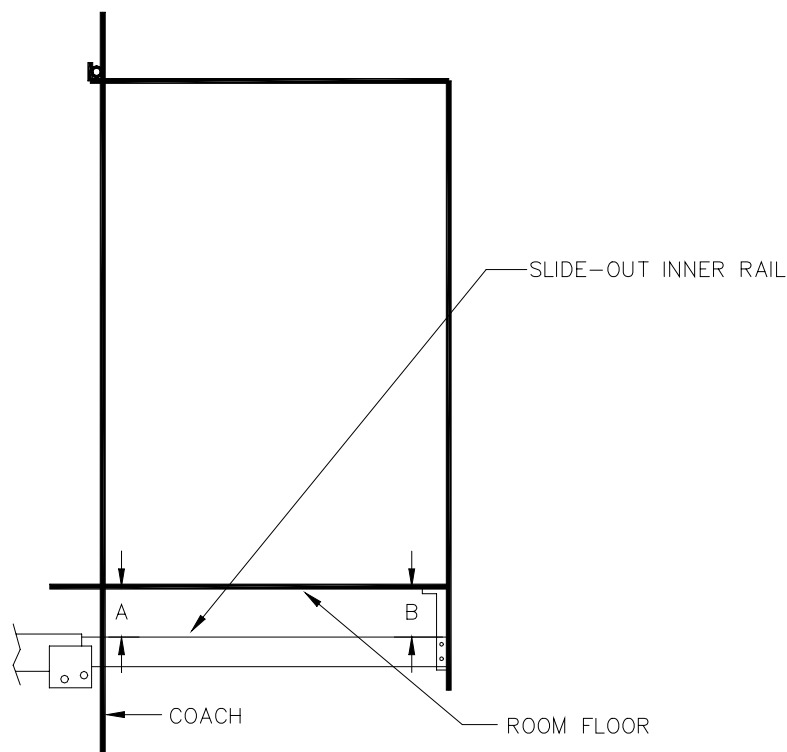

$$B = A_{-0}^{+1/8}$$

The distance between the bottom of the floor and the top of the inner rail must be the same distance (A=B) or the distance at the end of the inner rail can be 1/8" greater than the inside distance (B=A+1/8").