



1217 E. 7th Street
Mishawaka, IN 46544
Phone: 1-800-334-4712
1-888-339-2539
Fax: 574-256-6743

T.I.P. Troubleshooting Information on Power Gear

RV Manufacturer's Bracket Instruction For Horizontal and Vertical Adjustments

- 1.) Loosen nuts on carriage bolts (item 2 below). Turn jack bolts (item 1 below) clockwise to adjust the slide room position upward. Turn the jack bolt counterclockwise to adjust the slide room position downward.
- 2.) Loosen nuts and slide heads left or right to adjust the slide room position horizontally.
- 3.) Loosen bolts (item 3 below) and slide head in or out to adjust the side-to-side room seal compression or to adjust the out-position of the slide room.

